

Callaway  
V



**ECLIPSE** GPS



## INTRODUCTION

The Callaway ECLIPSE GPS delivers elite performance on the course in a versatile and unique design. Hit more greens and minimize penalty strokes by knowing precise distances to the front, center, and back of the green, as well as distances to hazards and doglegs.

## SPECIFICATIONS

Product	Callaway ECLIPSE GPS
# of Courses	30,000+
Battery	300mAh Lithium Ion Polymer
Battery Life	Up to 8 hours / Time: 38 Days
Weight	45 g.
Display Size	1.28" (128 x128 pixels)
Water Resistant	Yes 1ATM Designation

## CHARGING

1. Attach the magnetic pins on the charging cord to the magnetic charging ports located on the side of the watch.
2. Be sure the pins are aligned, then insert the other end of the charging cord into a USB port or AC adapter (not included).



3. When connection is made, **Battery Icon** bars will pulsate to indicate charging.

**Note:** **Battery Icon** bars will stop pulsating when charging is complete.



## DESCRIPTION OF TERMS

 
- **PRESS** - Press & Release button quickly.
- **HOLD** - Press & Hold button until desired screen appears or change happens.

## WATCH DIAGRAM



- A.** [ POWER ] - **HOLD** to Power On/Off, **PRESS** to turn Backlight On/Off
- B.** Charging Ports
- C.** [ UP ] - Scroll Up
- D.** [ OK ] - **PRESS** to Toggle Screens, Select Options - **HOLD** to access **Main Menu**.
- E.** [ DOWN ] - Scroll Down

## DISPLAY DIAGRAM

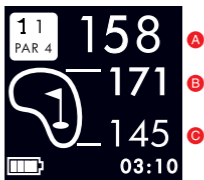


PLAY MODE



HAZARD MODE


- A. Distance to the **Center** of Green
- B. Distance to the **Back** of Green
- C. Distance to the **Front** of Green
- D. Distance to front and back of **Dogleg**
- E. Distance to layup or carry **Water**
- F. Distance to layup or carry **Bunker**

## TIME MODE

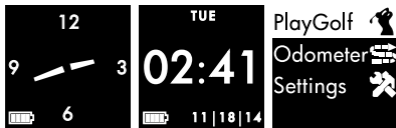 


1. **PRESS** [ OK ] button to toggle between Analog or Digital Time Display.
2. **PRESS** [ POWER ] button to turn Backlight On/Off.
3. To set time and date, see **Settings**. (Pg. 14)
4. **HOLD** [ OK ] button to access **Main Menu**.

## AT GOLF COURSE

 

1. From **Time Screen**, **HOLD** [ OK ] button to access **Main Menu**.
2. **PRESS** [ OK ] button to select **Play Golf**.
3. Device will begin searching for satellite signal (**HOLD** [ OK ] button to cancel).
4. Once satellite connection is established, the nearest golf courses will be listed. Use [ UP/DOWN ] buttons to scroll to desired course, **PRESS** [ OK ] button to select course.

## PLAY MODE

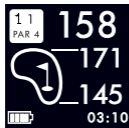 

1. **PRESS** [ OK ] button to toggle between Hazard, Scorecard, and Shot Distance Screens.
2. To exit Play Mode at any time, **HOLD** [ OK ] button.

## HAZARD VIEW



**Note:** If no hazards are present, screen will be blank.

1. **PRESS** [ OK ] button to access the Hazard Screen.
2. Only 3 hazards will show at a time. If a hole has more than 3 hazards, scroll by using [ UP/DOWN ] buttons. (*Hazards that are behind you will not be displayed*).
3. To exit, **PRESS** [ OK ] button to view Scorecard, Shot Distance (if enabled), or return to Play Mode.

## SHOT DISTANCE

**Note:** Shot Distance must be turned On in Settings.



1. **PRESS** [ OK ] button to access **Shot Distance**.
2. To start measuring **Shot Distance**, **PRESS** the [ DOWN ] button.
3. As you travel to your ball, the distance will begin calculating.
4. Once you arrive at your ball, the distance displayed is the distance of your previous shot (the distance you traveled).
5. To reset, **PRESS** the [ DOWN ] button.
6. **PRESS** [ OK ] button to view next/previous screen.



## SCORECARD

**Note:** Scorecard must be turned **On** in **Settings**.

H03	Par5
<b>Score</b>	<b>5</b>
<b>Putt</b>	<b>2</b>
<b>GIR</b>	<b>N</b>
Total 15	+1

1. **PRESS** [ OK ] button to access **Scorecard**.
2. Use [ UP/DOWN ] buttons until number of total strokes for that hole is displayed.
3. **HOLD** the [ DOWN ] button to scroll to **Putts**, use [ UP/DOWN ] buttons until correct number of putts is displayed.
4. **HOLD** the [ DOWN ] button to scroll to **GIR** (Greens in Regulation). Use [ UP/DOWN ] buttons to select **Y/N** (Yes or No).
5. To exit, **PRESS** [ OK ] button to return to **Play Mode**.

## AUTO-HOLE ADVANCE

 
1. The device will automatically switch to the next hole if Scorecard is turned **OFF**. If Scorecard is turned **ON**, a score must be entered before the device will advance to the next hole.

## END ROUND

1. When finished with round, **HOLD [OK]** button to return to **Main Menu**.
2. If **Scorecard** is turned on, use the **[UP/DOWN]** buttons to scroll to desired option, **PRESS [OK]** to select.
  - **Save & Exit** - Save Scorecard, end round, and return to **Main Menu**.
  - **Discard & Exit** - Discard Scorecard, end round, and return to **Main Menu**.
  - **Cancel** - Select to return to **Play Mode**.

## ODOMETER


1. From **Time Screen**, **HOLD [OK]** button to access **Main Menu**.
2. Use **[UP/DOWN]** buttons to scroll to **Odometer**, **PRESS [OK]** button to select.

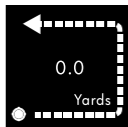


3. Circle will flash while connecting to satellite.
4. Once satellite connection is established,
5. To start, **PRESS [ UP ]** button. The **Odometer** will begin calculating the distance you will travel.
6. To reset, **PRESS [ DOWN ]** button. The distance will return to zero (0).
7. To exit and return to **Main Menu**, **HOLD [ OK ]** button.

## SETTINGS

 1. From **Time Screen**, **HOLD [ OK ]** button to access **Main Menu**.
2. Use [ UP/DOWN ] buttons to scroll to **Settings**.
3. **PRESS [ OK ]** button to access **Settings Menu**.
4. Use [ UP/DOWN ] buttons to scroll through **Settings Menu**.
5. **PRESS [ OK ]** button to select desired setting.
6. **HOLD [ OK ]** button to return to **Main Menu**.

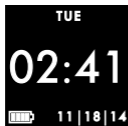

## ALARM

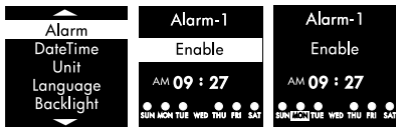 

1. Use [ UP/DOWN ] buttons to select **Alarm 1**, **Alarm 2**, or **Alarm 3**.
2. **PRESS** [ OK ] button to scroll down. **PRESS** [ UP/DOWN ] buttons to **Enable/Disable Alarm**.
3. **PRESS** [ OK ] button to scroll down. Use [ UP/DOWN ] buttons to set the **Hour**.
4. **PRESS** [ OK ] button to scroll to **Minutes**. Use [ UP/DOWN ] buttons to set the **Minutes** then **PRESS** [ OK ] button.
5. **PRESS** [ OK ] button to scroll through days of the week. Use [ UP/DOWN ] buttons to **Enable/Disable Alarm** for that day. (Enabled is represented by a circle.)
6. **HOLD** [ OK ] button to save and return to **Settings Menu**.
8. **HOLD** [ OK ] button to return to **Time Screen** (if desired).

## TIME SET

**Note:** To set the correct time, select Play Golf to connect to the satellites. The watch will then automatically set the correct time (must be outside).

1. Use [ UP/DOWN ] buttons to manually adjust the time by hour.



 
2. **PRESS** [ OK ] button to save and return to Settings Menu.

## DATE/TIME FORMAT

1. Use [ UP/DOWN ] button to change the **Date Format** (*MM-DD-YYYY, DD-MM-YYYY, YYYY-MM-DD*).



2. **PRESS** [ OK ] button to scroll down. Use [ UP/DOWN ] button to select **12 hour** or **24 hour** clock.

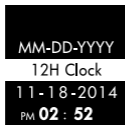

3. **HOLD** [ OK ] button to save and return to **Settings Menu**.

## SCORE HISTORY

1. Use [ UP/DOWN ] buttons to scroll to the saved score you would like to view, then **PRESS [ OK ]**.
2. **PRESS [ OK ]** button to save and return to **Settings Menu**.

## UNIT

1. Use [ UP/DOWN ] buttons to change unit of measure to **Yards** or **Meters**.
2. **PRESS [ OK ]** button to save and return to **Settings Menu**.

## LANGUAGE

1. Use [ UP/DOWN ] buttons to scroll through **Languages** (*English, Espanol, Francais, Deutsch*).
2. **PRESS [ OK ]** button to select **Language** and return to **Settings Menu**.
3. **PRESS [ OK ]** button to save and return to **Settings Menu**.

## BACKLIGHT

1. Use [ UP/DOWN ] buttons to scroll through the amount of time the **Backlight** stays on (*5s, 10s, 30s, off*).
2. **PRESS** [ OK ] button to save and return to **Settings Menu**.

## SOUND

1. Use [ UP/DOWN ] buttons to toggle **Sound** (*On/Off*).
2. **PRESS** [ OK ] button to save and return to **Settings Menu**.

## DISPLAY TYPE

1. Use [ UP/DOWN ] buttons to toggle the display type (Type 1 or Type 2).
2. **PRESS** [ OK ] button to save and return to **Settings Menu**.

## DAYLIGHT SAVINGS TIME (DST)

1. Use [ UP/DOWN ] buttons to toggle **DST** (*On/Off*).
2. **PRESS** [ OK ] button to save and return to **Settings Menu**.



## SCORECARD

1. Use [ UP/DOWN ] buttons to toggle **Scorecard (On/Off)**.
2. **PRESS** [ OK ] button to save and return to **Settings Menu**.

## SHOT DISTANCE

1. Use [ UP/DOWN ] buttons to toggle **Shot Distance (On/Off)**.
2. **PRESS** [ OK ] button to save and return to **Settings Menu**.

## MODEL INFO

1. **PRESS** [ OK ] button to return to **Settings Menu**.

## **WARRANTY POLICY**

This product is warranted to be free from defects for up to (1) year from the original purchase date. IZZO Golf cannot refund your purchase unless purchased directly from IZZO Golf. IZZO Golf will replace or repair any unit that is determined defective under normal use within the warranty period. Please call Customer Service at **888-606-4634** to request a Return Authorization. All defective products must be returned to:

**IZZO Golf**  
**Attn: Returns Dept.**  
**1635 Commons Parkway**  
**Macedon, NY 14502**

Please include a note with your Name, Address, Phone # and Return Authorization #. Your replacement will be shipped once we diagnose the returned unit.

**To register your product visit:**  
***[www.callawaydmd.com/registration](http://www.callawaydmd.com/registration)***

***If you have any other questions or concerns, please call 1-888-606-4634 or go to [www.callawaydmd.com](http://www.callawaydmd.com)***



## CAUTION

Global Position System (GPS) was developed and is managed by the United States Department of Defense (DOD) which is responsible for its normal operation and position precision control; the U.S. is entitled to affect function or position precision of the whole system without prior notification or announcement based on its political considerations or safety of national defense. In order to use the device correctly and safely, you must be aware of the following information prior to operating the device:

- The device was only designed for the purpose of leisure and recreation and is not applicable for industrial or special measurement.
- The device is only an auxiliary device. IZZO Golf will not accept any legal liability for accidents due to mistaken operation, or any use of the device for measurement.
- Please do not try to disassemble the device or repair any part of the device discreetly.
- Please do not store the device in places exposed to direct sunlight or in extremely high temperatures.

© 2017 CALLAWAY GOLF COMPANY.

Callaway Golf and the Chevron device are trademarks of Callaway Golf Company. IZZO Golf is an official licensee of Callaway Golf Company.