

Callaway
✓



350TL LASER RANGEFINDER



INTRODUCTION

Thank You for choosing the Callaway 350 TL Laser Rangefinder, delivers precise distance measurements in a sleek, compact design. The 350TL features the innovative PowerPad™. A new, patent pending, technology that allows the laser to be fired by pressing anywhere on it.

SPECIFICATIONS




Product	Callaway 350TL Laser Rangefinder
Model	350TL
Dimensions	4" x 1.5" x 2.5"
Weight	9.8 oz. (278g) (Without Battery)
Battery	CR2 3-Volt Lithium Battery
Display	LCD display
Magnification	6X
Max Range	5-1000 yd
Range To Flag	5-300 yd
Accuracy	+/- 1 yd
Slope Measurement Range	-89° - 90°
Unit of Measure	Yards/Meters
Water/Fog Proof	Weather Resistant (IPX3)

INCLUDES

A. CR2 - 3-Volt Lithium Battery

B. Carry Case

C. Cleaning Cloth

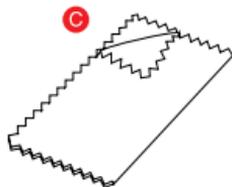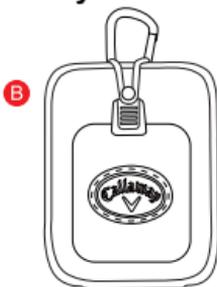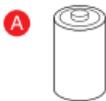

BATTERY INSTALLATION

1. Lift hatch tab.
2. Turn counterclockwise to open.
3. Remove protective plastic battery cover.
4. Replace battery cap & tighten by turning clockwise.

NOTE:

If the **Low Battery Icon** is present on LCD display, there are approximately 200 ranges left until the battery is completely drained. The **Low Battery Icon** will flash if the battery life is very low. In this case, the battery needs to be replaced before next use.

PLEASE NOTE:

Since the 350TL utilizes the **PowerPad™** instead of a traditional button, we highly recommend the user spend 10-15 minutes experiencing the difference before going to the golf course. Spend some time getting used to the pressure needed to fire the laser. You will find the **PowerPad™** is very responsive and does not require that much pressure at all.




RANGEFINDER DIAGRAM

- A. Eye Piece
- B. Diopter Adjustment
- C. PowerPad™
- D. Mode Pad
- E. Slope Switch
- F. Battery Door




INTERNAL DISPLAY

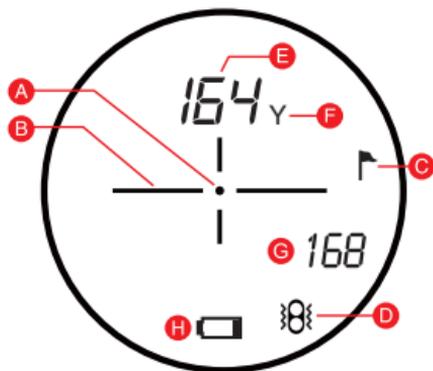


- A. ● Center Dot
- B. ─┬─ Crosshairs
- C. ─┬─ P.A.T. Mode Indicator
- D. ⌘ Pulse Indicator
- E. 164 Distance
- F. Y/M Unit of Measure
- G. 168 Slope Adjusted Distance
- H. [Battery Icon] Low Battery


HOW TO USE

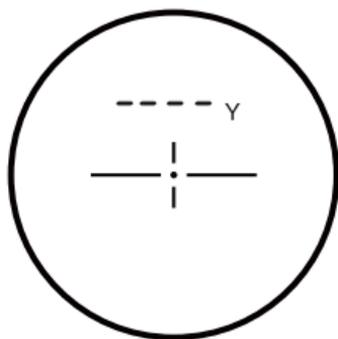

1. While looking through the **Eye Piece**, **TOUCH & HOLD** the **PowerPad™**. The rangefinder is now powered on.

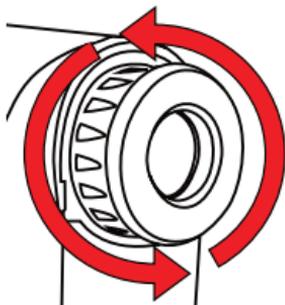

2. To focus/increase clarity, use the **Diopter Adjustment** by turning the **Eye Piece**.

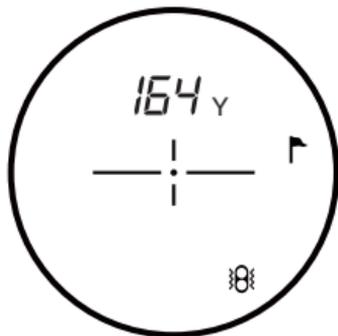


3. Continue looking through the **Eye Piece**, aim the **Center Dot** inside the **Crosshairs** at your target and **TAP & RELEASE** the **PowerPad™** on top to shoot a distance. The device will vibrate, and the distance will be displayed on the **LCD Screen**.

MEASUREMENT MODES

TOUCH & HOLD the **PowerPad™** to turn the laser ON. Then, **DOUBLE TAP** the **PowerPad™** to switch between Standard & P.A.T. Mode.

- 1. Standard - No Icon** will appear on the right side of the display. Standard Mode is recommended when measuring distances to larger objects (Fig. A). To quickly range targets, **TAP & RELEASE** the **PowerPad™**.
- 2. P.A.T. with Pulse Technology** - P.A.T. Mode is best used when measuring the distance to a Flagstick or smaller objects. Device will provide a short vibration to confirm that the laser has locked on to the pin/object. When P.A.T. Mode is activated, the flagstick icon will appear on the right side and the Pulse icon will appear on the bottom right side of the LCD display (Fig. B).

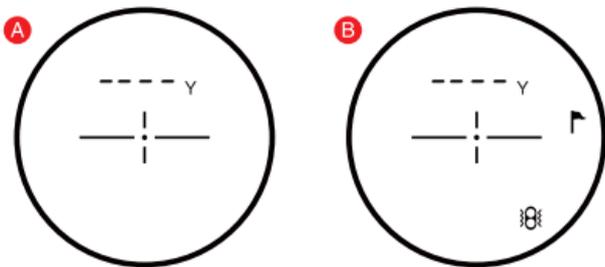


NOTE: To disable Pulse Technology, **TOUCH & HOLD** the **MODE** pad on the left side grip until you see a vibration icon in the bottom right corner of the LCD display. **TOUCH & RELEASE** the **PowerPad™** on top to change from **ON/OFF**.

3. Scanning - To measure distances to multiple targets in succession, **TOUCH & HOLD** the **PowerPad™** to power on. Then **HOLD PowerPad™**, the **Crosshairs** will flash and the laser will continuously fire. Measurements will change as you scan the landscape and change targets.

NOTE: While scanning in P.A.T. Mode, the measurement will only change when a shorter distance is measured. This is useful when measuring the distance to a flagstick when there are trees or other objects in the background.

4. Unit of Measure - To change the unit of measure from Yards to Meters, **TOUCH & HOLD** the top **PowerPad™** until the unit turns on. Then **TOUCH & HOLD** the **MODE Pad** on the left side grip (**MODE**) until you see **UNIT** on the LCD Display. **TOUCH & HOLD** the top **PowerPad™** until you see the M switch to Y.

5. **Slope Mode** - Device will measure the angle of incline/decline (Fig. A) then calculate and display the slope adjusted distance in the bottom right of the LCD display. (Fig. B)

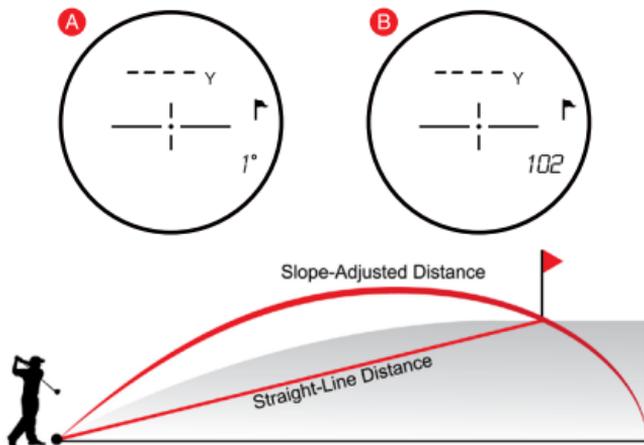

• **To turn Slope Measurement On/Off:**

NOTE: The slope measurement & adjusted yardage will appear in the bottom right corner of the LCD display when the function is enabled

1. To activate **SLOPE**, pull the red ring around the eye piece out. You will see 4 dashes appear on the LCD Screen below the center Crosshairs. The Laser is not tournament legal when slope is enabled.
2. To deactivate **SLOPE**, push the red ring around the eye piece in. The Slope function will not appear unless enabled. The Laser is tournament legal when slope is turned off.



OPERATIONAL NOTES


1. The maximum measurement range is 5-1000 yards to objects and 5-300 yards to a flagstick with +/- 1 yard accuracy.

NOTE: Maximum range can depend on several factors, including target characteristics and environmental conditions. For instance, longer maximum distances may be obtained to targets that are large in size, brightly colored, or have a reflective finish. Ranging capability can also be affected by the angle to the target and lighting conditions.

2. **Auto Shutoff** - To conserve battery life, the device will automatically power off when idle for more than 5 seconds.
3. **Weather Conditions** - Heavy rain and thick fog can potentially limit the maximum range of the device.
4. **Weather Resistant** - Protected against light rain.

STORING THE LASER

- Do not leave the eyepiece in direct sunlight. The condenser effect of the lens may damage the internal display surface.

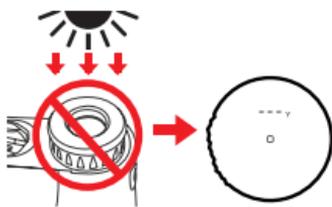

MAINTENANCE

1. To clean, use only a soft, clean cloth to prevent scratches.
2. Do not submerge in liquid or apply any cleaning products.
3. Do not store in extremely hot/cold temperatures (<50°F - >110° F).
4. Store in carrying case when not in use.

TROUBLESHOOTING

Rangefinder is consistently providing inaccurate measurements.

- Make sure the device is set to the desired unit of measure (Yards or Meters).
- Weak battery signal can affect the accuracy of the device. If the **Low Battery Indicator** is present on the LCD display, replace the battery.
- Make sure there isn't anything obstructing your view such as leaves, branches, your finger, etc.

When looking through the Eye Piece, the view is blurry.

- Use the Diopter Adjustment by turning the **Eye Piece** to focus/increase clarity.
- Make sure there isn't anything obstructing your view such as leaves, branches, your finger, etc.
- Use a soft, clean cloth to clean lens.

When should the battery be replaced?

- If the **Low Battery Indicator** is present on the LCD display.
- If the rangefinder is consistently providing inaccurate measurements.
- If the LCD display is not present when **TOUCHING & HOLDING** the **PowerPad™**.

Why is my battery draining so quickly?

- If the **PowerPad™** is inadvertently held down, the battery will drain. To avoid this, store rangefinder in carry case when not in use.

TROUBLESHOOTING (CONTINUED)

When should P.A.T. Mode be used?

- When measuring the distance to smaller targets such as a flagstick.
- When scanning the landscape to measure distances to a smaller target such as a flagstick and there are trees or other objects in the background.

***If you have any other questions or concerns,
please call 800-456-2129 or go to www.callawaytag.com.***

WARRANTY POLICY

This product is warranted to be free from defects for up to (1) year from the original purchase date. IZZO Golf cannot refund your purchase unless purchased directly from IZZO Golf. IZZO Golf will replace or repair any unit that is determined defective under normal use within the warranty period. Please call Customer Service at **800-456-2129** to request a Return Authorization. All defective products must be returned to:

***IZZO Golf
Attn: Returns Dept.
1635 Commons Parkway
Macedon, NY 14502***

Please include a note with your Name, Address, Phone # and the Return Authorization #. Your replacement will be shipped once we diagnose the returned unit.

WARNING

- **NEVER** look directly into the sun or intense light when using the laser rangefinder.
- **DO NOT** aim/point laser rangefinder at another person.
- **DO NOT** aim/point laser rangefinder at anyone's eyes or face.
- **DO NOT** attempt to disassemble the laser rangefinder.
- **DO NOT** submerge in any liquid.
- **DO NOT** store the laser rangefinder in extreme cold/hot temperatures (<50°F - >110°F).



IZZO GOLF, INC.

Tel: 888-606-4634

1635 Commons Parkway Macedon, NY 14502

CLASS 1 LASER PRODUCT INVISIBLE LASER
RADIATION AVOID DIRECT EXPOSURE

Complies with FDA performance standards for laser
products except for deviations pursuant to Laser

Notice No. 50, dated June 24, 2007

905nm, Max <1mW



© 2021 CALLAWAY GOLF COMPANY. Callaway Golf and the Chevron device are trademarks of Callaway Golf Company. IZZO Golf is an official licensee of Callaway Golf Company.

Callaway®

