

SWAMI KISS QUICK START



CHARGING

1. Insert micro USB charging end into the Swami Kiss & then insert the USB end of the charging cord into a USB charging port or AC adapter (included). The recommended USB charging rate is 5V, 1A.
2. A complete full charge will take roughly 6 hours of charging time.



BUTTON DESCRIPTION & SCREEN LAYOUT



- A. [POWER] Button:** Hold to power on. Hold to power off.
- B. [OK] Button:** Press to select options and to toggle between Green, Hazards, and Scorecard. Press & hold to return to previous screen.
- C. [UP] Button:** Press to scroll up, change holes.
- D. [Down] Button:** Press to scroll down, change holes.

To view complete user manual visit: WWW.IZZO.COM


SCREEN DISPLAY

1. PLAY GOLF

Select to display list of courses closest to your location. Use **[UP]** & **[DOWN]** buttons to select your course, then press **[OK]** button.

2. YDG LAYOUT

Select to choose how you would prefer the distances to display in **PlayGolf** Mode. Use **[UP]** & **[DOWN]** buttons to choose **Type 1 (A)** or **Type 2 (B)**. Keep your selected Type highlighted, then press & hold **[OK]** to go back to the Main Menu.

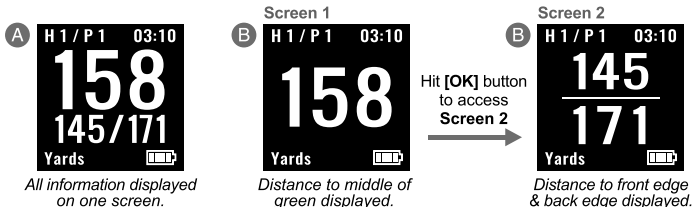

NOTE: If you press **[OK]** on Type 1 or Type 2, the Kiss will display an example of how the yardages will display in **PlayGolf**. Press **[OK]** to go back to the YDG Layout options and then press & hold **[OK]** to go back to the **Main Menu**.

3. SETTINGS

Select to display options like **SCORECARD**, **HAZARDS**, **SHOT DISTANCE** and more. Use the **[UP]** and **[DOWN]** buttons to select, then press **[OK]** to toggle the selection on or off. Press and hold the **[OK]** button to go back to the main screen.

4. DEMO

Select to enter **DEMO Mode**. Exit by pressing and holding the **[OK]** button.

USING SWAMI ON THE COURSE

Select the **PlayGolf** option from the Main Menu and press **[OK]**. The Swami Kiss will search for surrounding courses that the device supports. Use the **[UP]** & **[DOWN]** buttons to select your golf course, then press the **[OK]** button.

1. PLAY MODE



2. HAZARDS



3. SCORECARD

H03	Par5
Score	5
Putt	2
GIR	N
Total 15	+1

 
4. SHOT DISTANCE



- 1. PLAY MODE** will display the distance to the Front, Center & Back edge of the green for current hole (Type 1 Yardage view). If Type 2 Yardage view is selected, the screen will display the distance to the middle of the green. If you click the **[OK]** button while on the screen for Type 2 it will display screen two which shows the distance to the front and back edge of the green.
2. While in **PLAY MODE**, press the **[OK]** button to access the **HAZARD SCREEN**. To return to the **PLAY MODE** screen (distances to green), press **[OK]** again.
NOTE: HAZARDS can only be used if turned ON in Settings.
3. To access the **SCORECARD**, press the **[OK]** button to display the **SCORECARD**. To enter your score, press the **[UP]** or **[DOWN]** buttons. Once score is selected, press **[OK]** & then the **[DOWN]** button to input your Putts on the green, then select Y/N for your GIR. To return to the **PLAY MODE** screen (distances to green), press **[OK]** again.
NOTE: SCORECARD can only be used if turned ON in Settings.
4. While in **PLAY MODE**, press the **[OK]** button to access the **SHOT DISTANCE**. Then, travel from the where you hit your shot to the location of where your ball ended. The distance that the shot traveled will be displayed. To return to the **PLAY MODE** screen (distances to green), press **[OK]** again.
NOTE: SHOT DISTANCE can only be used if turned ON in Settings.

MAGNET

The SWAMI Kiss contains a strong magnet inside of the unit. Use the magnet to attach to a metal surface for hands-free use on the course. To attach, simply line up the back of the unit with a metal surface & allow the magnet to connect before letting go.



MANUAL

To view complete user manual visit: WWW.IZZO.COM



1635 Commons Parkway
Macedon, NY 14502
www.izzo.com
1.800.284.1220