



***LITE GOLF GPS***



## INTRODUCTION

The SWAMI LITE may be small in size, but it's packed with features! Get instant distances to the Front, Center & Back of the green, as well as both layup & carry distances to hazards & doglegs. The LITE comes preloaded with over 38,000 global courses; with no annual fees, free course updates & additions! Other convenient features include auto-hole advance, a digital scorecard and an internal magnet for ultra-convenient cart frame mounting & viewing.

## SPECIFICATIONS:

Product	SWAMI LITE Golf GPS
# of Courses	38,000+
Battery	270mAh Lithium Ion Polymer
Battery Life	Up to 16 hours
Weight	2.6 oz. / 74 g
Display Size	1.28" (128 x128 pixels)
Water Resistant	Protected against light rain

## CHARGING

1. Insert micro USB charging end into the Swami LITE & then insert the USB end of the charging cord into a USB charging port or AC adapter (included). The recommended USB charging rate is 5V, 1A.
2. A complete full charge will take roughly 6 hours of charging time.



3. When connection is made, **Battery Icon** bars will pulsate to indicate charging.

**Note:** **Battery Icon** bars will stop pulsating when charging is complete.

## DESCRIPTION OF TERMS

- **PRESS - PRESS & RELEASE** button quickly.
- **HOLD - PRESS & HOLD** button until desired screen appears or change happens.



- A. [POWER] Button:** **HOLD** to power on. **HOLD** to power off.
- B. [OK] Button:** **PRESS** to select options & to toggle between Green, Hazards, and Scorecard. **PRESS & HOLD** to return to previous screen.
- C. [UP] Button:** **PRESS** to scroll up, change holes.
- D. [Down] Button:** **PRESS** to scroll down, change holes.

## DISPLAY DIAGRAM



### PLAY MODE

 
- A.** Distance to the **Center** of Green
- B.** Distance to the **Back** of Green
- C.** Distance to the **Front** of Green
- D.** Hole/Par
- E.** Unit of Measurement (Y/M)
- F.** Time
- G.** Battery Level



### HAZARD MODE

- A.** Distance to front and back of **Dogleg**
- B.** Distance to layup or carry **Water**
- C.** Distance to layup or carry **Bunker**

## AT GOLF COURSE

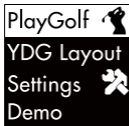

1. **PRESS [OK]** button to select **Play Golf**.
2. Device will begin searching for satellite signal (**HOLD [OK]** button to cancel).
3. Once satellite connection is established, the nearest golf courses will be listed. Use **[UP/DOWN]** buttons to scroll to desired course, **PRESS [OK]** button to select course.

## PLAY MODE



1. **PRESS [OK]** button to toggle between **Hazard**, **Scorecard**, and **Shot Distance** screens.
2. To exit **Play Mode** at any time, **HOLD [OK]** button.

## HAZARD VIEW



**Note:** If no hazards are present, screen will be blank.

1. **PRESS [OK]** button to access the **Hazard** screen.
2. Only 3 hazards will show at a time. If a hole has more than 3 hazards, scroll by using **[UP/DOWN]** buttons. (*Hazards that are behind you will not be displayed*).
3. To exit, **PRESS [OK]** button to view **Scorecard, Shot Distance** (if enabled), or return to **Play Mode**.

## SHOT DISTANCE

**Note:** Shot Distance must be turned On in Settings.



1. **PRESS** [ **OK** ] button to access **Shot Distance**.
2. To start measuring **Shot Distance**, **PRESS** the [ **DOWN** ] button.
3. As you travel to your ball, the distance will begin calculating.
4. Once you arrive at your ball, the distance displayed is the distance of your previous shot (the distance you traveled).
5. To reset, **PRESS** the [ **DOWN** ] button.
6. **PRESS** [ **OK** ] button to view next/previous screen.



## SCORECARD

**Note:** Scorecard must be turned **On** in **Settings**.

H03	Par5
<b>Score</b>	5
<b>Putt</b>	2
<b>GIR</b>	N
Total 15	+1

1. **PRESS** [ **OK** ] button to access **Scorecard**.
2. Use [ **UP/DOWN** ] buttons until number of total strokes for that hole is displayed.
3. **HOLD** the [ **DOWN** ] button to scroll to **Putts**, use [ **UP/DOWN** ] buttons until correct number of putts is displayed.
4. **HOLD** the [ **DOWN** ] button to scroll to **GIR** (Greens in Regulation). Use [ **UP/DOWN** ] buttons to select **Y/N** (Yes or No).
5. To exit, **PRESS** [ **OK** ] button to return to **Play Mode**.

## AUTO-HOLE ADVANCE

 
 
1. The device will automatically switch to the next hole if **Scorecard** is turned **OFF** or **ON**.

## END ROUND

1. When finished with round, **HOLD [OK]** button to return to **Main Menu**.
2. If **Scorecard** is turned on, use the **[UP/DOWN]** buttons to scroll to desired option, **PRESS [OK]** to select.
  - **Save & Exit** - Save Scorecard, end round, and return to **Main Menu**.
  - **Discard & Exit** - Discard Scorecard, end round, and return to **Main Menu**.
  - **Cancel** - Select to return to **Play Mode**.


## YARDAGE LAYOUT

Select to choose how you would prefer the distances to display in **PlayGolf** Mode. Use **[UP] & [DOWN]** buttons to choose **Type 1 (A)** or **Type 2 (B)**. Keep your selected Type highlighted, then **PRESS & HOLD [OK]** to go back to the Main Menu.

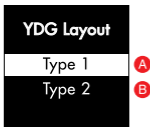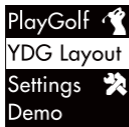


## YARDAGE LAYOUT (continued)
 
### TYPE 1

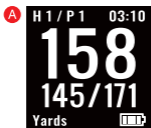

*Front/Center/Back  
distances displayed  
on single screen*

### TYPE 2

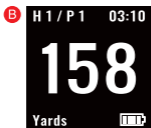 

*Center distances  
only displayed*

**PRESS**  
[OK] button  
to toggle





*Front & Back  
distances displayed*

**NOTE:** If you **PRESS [OK]** on Type 1 or Type 2, the Lite will display an example of how the yardages will display in **PlayGolf**. **PRESS [OK]** to go back to the YDG Layout options and then **PRESS & HOLD [OK]** to go back to the **Main Menu**.

## SETTINGS

  1. Use [ UP/DOWN ] buttons to scroll to **Settings**.
2. **PRESS** [ OK ] button to access **Settings Menu**.
3. Use [ UP/DOWN ] buttons to scroll through **Settings Menu**.
4. **PRESS** [ OK ] button to select desired setting.
5. **HOLD** [ OK ] button to return to **Main Menu**.

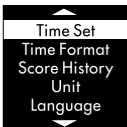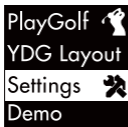

## TIME SET

**Note:** To set the correct time, select PlayGolf to connect to the satellites. The watch will then automatically set the correct time (must be outside).

 
1. Use [ UP/DOWN ] buttons to manually adjust the time by hour.



2. **PRESS** [ OK ] button to save and return to **Settings Menu**.

## TIME FORMAT

1. **PRESS [OK]** button to scroll down. Use **[UP/DOWN]** button to select **12 hour** or **24 hour** clock.

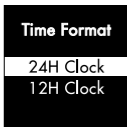

2. **HOLD [OK]** button to save and return to **Settings Menu**.

## SCORE HISTORY

1. Use **[UP/DOWN]** buttons to scroll to the saved score you would like to view, then **PRESS [OK]**.
2. **PRESS [OK]** button to save and return to **Settings Menu**.

## UNIT

1. Use **[UP/DOWN]** buttons to change unit of measure to **Yards** or **Meters**.
2. **PRESS [OK]** button to save and return to **Settings Menu**.

## LANGUAGE

1. Use [ **UP/DOWN** ] buttons to scroll through **Languages** (*English, Espanol, Francais, Deutsch*).
2. **PRESS** [ **OK** ] button to select **Language** and return to **Settings Menu**.
3. **PRESS** [ **OK** ] button to save and return to **Settings Menu**.

## BACKLIGHT

1. Use [ **UP/DOWN** ] buttons to scroll through the amount of time the **Backlight** stays on (*5s, 10s, 30s, off*).
2. **PRESS** [ **OK** ] button to save and return to **Settings Menu**.

## DISPLAY TYPE

1. Use [ **UP/DOWN** ] buttons to toggle the display type (Type 1 or Type 2).
2. **PRESS** [ **OK** ] button to save and return to **Settings Menu**.

## DAYLIGHT SAVINGS TIME (DST)

1. Use [ **UP/DOWN** ] buttons to toggle **DST** (*On/Off*)
2. **PRESS** [ **OK** ] button to save and return to **Settings Menu**.

## SCORECARD

1. Use [ UP/DOWN ] buttons to toggle Scorecard (*On/Off*).
2. **PRESS** [ OK ] button to save and return to **Settings Menu**.

## SHOT DISTANCE

1. Use [ UP/DOWN ] buttons to toggle Shot Distance (*On/Off*).
2. **PRESS** [ OK ] button to save and return to **Settings Menu**.

## HAZARDS

1. Use [ UP/DOWN ] buttons to toggle Hazards (*On/Off*).
2. **PRESS** [ OK ] button to save and return to **Settings Menu**.

## MODEL INFO

1. **PRESS** [ OK ] button to return to **Settings Menu**.

## DEMO

Select to enter **DEMO Mode**. Exit by pressing and holding the **[OK]** button.

## MAGNETIC CART MOUNT

The SWAMI LITE contains a strong magnet inside of the unit. Use the magnet to attach to a metal surface for hands-free use on the course. To attach, simply line up the back of the unit with a metal surface and allow the magnet to connect before letting go.





## **WARRANTY POLICY**

This product is warranted to be free from defects for up to (1) year from the original purchase date. IZZO Golf cannot refund your purchase unless purchased directly from IZZO Golf. IZZO Golf will replace or repair any unit that is determined defective under normal use within the warranty period. Please call Customer Service at **800-284-1220** to request a Return Authorization. All defective products must be returned to:

**IZZO Golf**  
**Attn: Returns Dept.**  
**1635 Commons Parkway**  
**Macedon, NY 14502**

Please include a note with your Name, Address, Phone # and Return Authorization #. Your replacement will be shipped once we diagnose the returned unit.

**If you have any other questions or concerns, please call 800-284-1220 or go to [www.izzo.com](http://www.izzo.com)**

## CAUTION

Global Position System (GPS) was developed & is managed by the United States Department of Defense (DOD) which is responsible for its normal operation and position precision control; the U.S. is entitled to affect function or position precision of the whole system without prior notification or announcement based on its political considerations or safety of national defense. In order to use the device correctly and safely, you must be aware of the following information prior to operating the device:

- The device was only designed for the purpose of leisure and recreation and is not applicable for industrial or special measurement.
- The device is only an auxiliary device. IZZO Golf will not accept any legal liability for accidents due to mistaken operation, or any use of the device for measurement.
- Please do not try to disassemble the device or repair any part of the device discreetly.
- Please do not store the device in places exposed to direct sunlight or in extremely high temperatures.

