



SWAMI™ MAX

GOLF GPS



MANUAL



CHARGING

1. Insert the micro USB charging end into the Swami MAX & then insert the USB end of the charging cord into a USB charging port or AC adapter (included). The recommended USB charging rate is 5V, 1A.
2. A complete full charge will take roughly 6 hours of charging time.



BUTTON DESCRIPTION

- **[Power] Button:** Hold to power on/off
- **[OK] Button:** Tap to confirm selection.
- **[BACK] Button:** Tap to return to previous screen.
- **[Up] Button:** Press to scroll up, change holes.
- **[Down] Button:** Press to scroll down, change holes.



FORCE SHUT DOWN

If you experience an error while using your MAX, please follow the force shut down procedure shown below. This will automatically power off your unit. Once powered down, the unit can be turned on again.

PRESS the **[Power]** button, **[Up]** button and **[BACK]** button all at once to perform the force reset.

USING SWAMI ON THE COURSE

Select the **PLAY GOLF** option from the *Start Menu* and press **[OK]** The Swami MAX will search for surrounding courses that the device supports. Use the **[Up]** and **[Down]** keys to select your golf course, then press the **[OK]** button.

1. PLAY MODE




2. HAZARDS



3. SCORECARD



4. SHOT DISTANCE

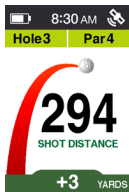


1. **PLAY GOLF** will now display the distance to the front, center & back edge of the green for the current hole.
 2. While in **Play Mode**, press the **[OK]** button to access the **hazard screen**. To return to the **Play Mode** screen (distances to green) tap the **[OK]** button.
 3. To access the scorecard, press the **[OK]** button while on the **hazard screen**. Press the **[UP]** or **[DOWN]** buttons to enter your score, then press **[OK]** to return to the **Play Mode** screen (distances to green).
- Note:** Scorecard can only be used if turned ON in settings
4. While in **Play Mode**, press **[OK]** to access **Shot Distance Mode**, & then travel from where you hit your shot to your ball. The distance that the shot traveled will be displayed. To return to the **Play Mode** screen (distances to green), press the **[OK]** button.

Note: Shot Distance Mode can only be used if turned ON in settings

YDG LAYOUT

The SWAMI MAX features (2) yardage layout designs.

[TYPE 1]: Clearly displays center, front, and back yardages.

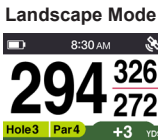

To enter landscape mode orientation, simply turn your unit sideways while in [PLAY GOLF] mode.

[TYPE 2]: Displays large center yardage. Hit [OK] to display front and back yardages

Center Yardage



Distance to Center of Green

Front/Back Yardage



Distance to Back of Green

Distance to Front of Green

