



Watch GPS Instruction Manual

TABLE OF CONTENTS

| | |
|---|------------|
| 1. General Description of Hardware | 2 |
| 1.1 Basic Specifications | 2 |
| 1.2 Accessories List | 2 |
| 1.3 Screen Display Description | 3 |
| 2. Getting Started | 4 |
| 2.1 Power On/Off | 4 |
| 3. Time Mode | 4 |
| 4. Using Swami on the Course | 5 |
| 4.1 Getting Started | 5-6 |
| 4.2 Play Mode | 7 |
| 4.3 Shot Distance | 7 |
| 4.4 Electronic Score Card | 8 |
| 4.5 Odometer | 9 |
| 4.6 EndRound | 9 |
| 5. Swami Settings | 10 |
| 5.1 Alarm | 10 |
| 5.2 Backlight | 11 |
| 5.3 Sound | 11 |
| 5.4 Date/Time | 12 |
| 5.5 Time Format | 13 |
| 5.6 Unit | 13 |
| 5.7 Daylight Savings Time | 14 |
| 5.8 Language | 14 |

| | |
|---------------------------|----|
| 5.9 Device Info | 15 |
| Caution | 15 |
| Using Conditions | 15 |
| Charging Swami | 16 |
| Warranty | 17 |
| Questions & Answers | 17 |
| Registration Card | 18 |

1. General Description of Hardware

1.1 Basic Specifications

| | |
|--------------------------|---|
| Number of courses stored | +35,000 Worldwide |
| Receiving chip | SiRF Star III |
| Battery | 300 mAh coin type rechargeable |
| Battery Life | Golf Mode – 6.5 hours / Time Mode – 40 days |
| USB interface | Supported |
| Display size | 1" Transflective |
| Water resistant | Yes IPX7 |

1.2 Accessories List

- USB Cable
- Charging Station
- User Manual

1.3 Screen Display Description



Key Description:

- **Power/Backlight:** Press and hold (3 seconds) to turn the device on and off. Press once to turn on backlight.
- **OK/Menu:** Press to select menu options and acknowledge messages. Press to switch pages (**Green View**, **Shot Distance**, **Scorecard**, and **Odometer**) Press and hold to open **Main Menu**.
- **Up:** Press to scroll up through menus, holes, and settings.
- **Down:** Press to scroll down through menus, holes, and settings.

2. Getting Started

2.1 Power On/Off



1. Press and hold **Power** key for 3 seconds until the power screen appears.
2. The device will show the Start-Up logo first and into the **Time Mode** screen.
3. To turn off the device, press and hold the **Power** key.

3. Time Mode



- A.** Day of Week
- B.** Time of Day
- C.** Date

1. From **Time Mode** page
2. Press **Up** key to display **Stopwatch** .
 - To start **Stopwatch**, press **OK/Menu** key
 - To pause **Stopwatch**, press **OK/Menu** key again.
 - To reset the **Stopwatch**, press and hold **Down** key.
3. Press **Up** key again to change 3rd row to display **Seconds** .
4. Press **Up** key again to change 3rd row to display **Sunset** time . Press **Up** key again to change 3rd row to display **Sunrise** time .

Note: Date/Time must be set to AUTO for Sunrise/Sunset Feature (See page 12). Satellite connection must be available.


4. Using Swami on the Course (directions on page 6)

1



Time Mode Page

2

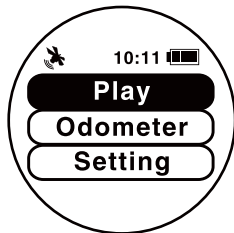

Main Menu Page

3



Searching for Signal

4




Choose Course

4. Using Swami on the Course (Screen shots on page 5)



4.1 Getting Started

1. From **Time Mode** page, press and hold **OK/Menu** key to access **Main Menu** page.
2. Use **Up** or **Down** key to select **Play Golf** and press **OK/Menu** key.
3. Device will begin to search for satellite signal, you can press **OK/Menu** key to cancel request. *(Note: When Swami is used for the first time or has not been used for a while, it may take a few minutes to locate satellites. If it has not located them within 5 minutes, please turn watch completely off and try again).*
4. When device has found the satellite, it will begin auto searching the surrounding courses that the device supports. You can press **OK/Menu** key to cancel request.
5. It will then list the nearest golf courses to choose from. Use **Up** or **Down** key to select the golf course, then press **OK/Menu** key to continue.
6. Device will begin **Play Mode** and start at hole #1, user can press **Up** or **Down** key to switch the hole number. *(see page 7 for Play Mode screen)*

4.2 Play Mode

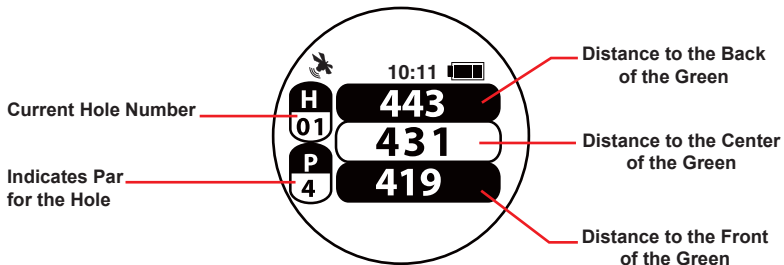


4.3 Shot Distance

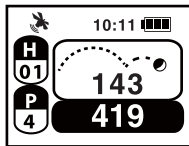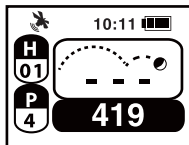



1. From **Green View** page, press **OK/Menu** key to switch to **Shot Distance** page.
2. Press & hold **Down** key to reset distance to 0.
3. Press & hold **Up** key to start marking.
4. Press & hold **Down** key to reset when finished.
5. Press **OK/Menu** key twice to return to **Play Mode** screen.

4.4 Electronic Scorecard

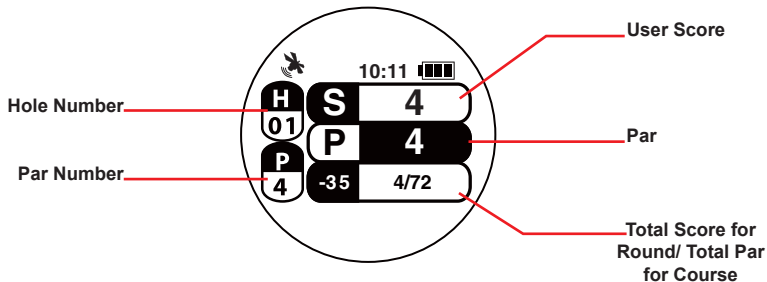

1. From **Shot Distance** screen, press **OK/Menu** key to switch to **Scorecard** screen.
2. Use **Up** or **Down** key to see scorecard for each hole.
3. To change the default **Par** press and hold **Down** key to access **Edit** mode. Use **Up** or **Down** key to change the par then press **OK/Menu** key.
4. To change the **Score** press and hold **Up** key to access **Edit** mode. Use the **Up** or **Down** key to change score for the hole then press **OK/Menu** key.
5. Press **OK/Menu** key to return to **Play Mode** screen.

4.5 Odometer

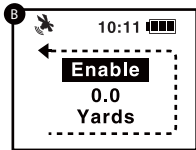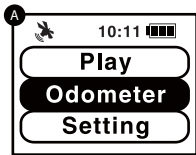




1. From **Time Mode** or **Play Mode**, press and hold **OK/Menu** key to access **Main Menu**.
2. Use **Up** or **Down** key to select **Odometer** and press **OK/Menu** key (Figure A).
3. Press **Up** key to Enable **Odometer** (Figure B).
(Note: Will beep three times when ready)
4. Press **Up** key again to Disable **Odometer**.
5. Press **Down** key to reset **Odometer**.
6. To exit **Odometer**, press and hold **OK/Menu** key to return back to **Main Menu**.
7. Press and hold **OK/Menu** key again will return back to **Time Mode** page.

4.6 End Round

1. Press and hold **OK/Menu** key to return back to **Main Menu** will end the golf round.
2. Press and hold **OK/Menu** key again to return back to **Time Mode** page.


5. Swami Settings

5.1 Alarm

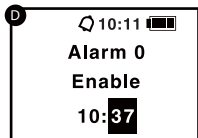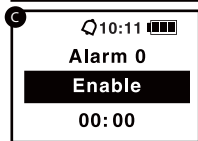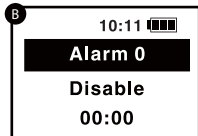

1. From **Time Mode** page, press and hold **OK/Menu** key to access **Main Menu**.
2. Use **Up** or **Down** key to select **Settings** and press **OK/Menu** key.
3. Use **Up** or **Down** key to select **Alarm** and press **OK/Menu** key (Figure A).
4. Use **Up** or **Down** key to select **Alarm 0/Alarm 1/Alarm 2** and press **OK/Menu** key (Figure B).
5. Use **Up** or **Down** key to Enable/Disable and press **OK/Menu** key (Figure C).
6. If Enabled, Use **Up** or **Down** key to set **HH (00 ~ 23)** and press **OK/Menu** key.
7. Use **Up** or **Down** key to set **MM (00 ~ 59)** and press **OK/Menu** key (Figure D).
8. Press and hold **OK/Menu** key to return back to **Settings Menu**.

5.2 Backlight

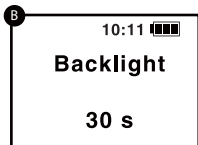




1. From **Time Mode** page, press and hold **OK/Menu** key to access **Main Menu**.
2. Use **Up** or **Down** key to select **Settings** and press **OK/Menu** key.
3. Use **Up** or **Down** key to select **Backlight** and press **OK/Menu** key (Figure A).
4. Use **Up** or **Down** key to select **Off/5s/10s/30s** and press **OK/Menu** key (Figure B).
5. Press and hold **OK/Menu** key to return back to **Settings Menu**.

5.3 Buzzer - Turn button sound On/Off





1. From **Time Mode** page, press and hold **OK/Menu** key to access **Main Menu**.
2. Use **Up** or **Down** key to select **Settings** and press **OK/Menu** key.
3. Use **Up** or **Down** key to select **Buzzer** and press **OK/Menu** key (Figure A).
4. Use **Up** or **Down** key to select **On/Off** and press **OK/Menu** key.
5. Press and hold **[OK/Menu]** key to return back to **Settings Menu**.

5.4 Date/Time

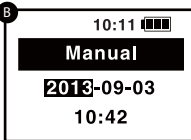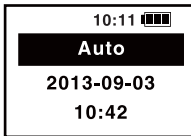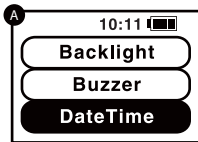


1. From **Time Mode** page, press and hold **OK/Menu** key to access **Main Menu**.
2. Use **Up** or **Down** key to select **Settings** and press **OK/Menu** key.
3. Use **Up** or **Down** key to select **DateTime** and press **OK/Menu** key (*Figure A*).
4. Use **Up** or **Down** key to select **Manual** or **Auto** and press **OK/Menu** key.
5. If **Manual** is selected (*Figure B*):
 - Use **Up** or **Down** key to select **Year** and press **OK/Menu** key.
 - Use **Up** or **Down** key to select **Month** and press **OK/Menu** key.
 - Use **Up** or **Down** key to select **Day** and press **OK/Menu** key.
 - Use **Up** or **Down** key to select **Hours** and press **OK/Menu** key
 - Use **Up** or **Down** key to select **Seconds** and press **OK/Menu** key
6. Press and hold **OK/Menu** key to return back to **Settings Menu**.

5.5 Time Format

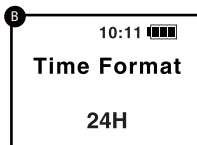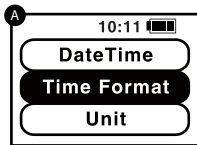



1. From **Time Mode** page, press and hold **OK/Menu** key to access **Main Menu**.
2. Use **Up** or **Down** key to select **Settings** and press **OK/Menu** key.
3. Use **Up** or **Down** key to select **Time Format** and press **OK/Menu** key (*Figure A*).
4. Use **Up** or **Down** key to set **12H/24H** and press **OK/Menu** key (*Figure B*).
5. Press and hold **OK/Menu** key to return back to **Settings Menu**.

5.6 Unit - Change unit of measurement between yards and meters

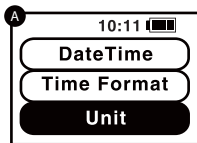


1. From **Time Mode** page, press and hold **OK/Menu** key to access **Main Menu**.
2. Use **Up** or **Down** key to select **Settings** and press **OK/Menu** key.
3. Use **Up** or **Down** key to select **Unit** and press **OK/Menu** key (*Figure A*).
4. Use **Up** or **Down** key to select **Metric/Imperial** and press **OK/Menu** key.
5. Press and hold **[OK/Menu]** key to return back to **Settings Menu**.

5.7 Daylight Saving Time

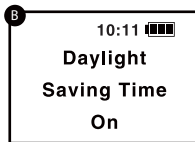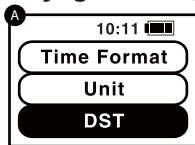


1. From **Time Mode** page, press and hold **OK/Menu** key to access **Main Menu**.
2. Use **Up** or **Down** key to select **Settings** and press **OK/Menu** key.
3. Use **Up** or **Down** key to select **DST** and press **OK/Menu** key (*Figure A*).
4. Use **Up** or **Down** key to select **On/Off** and press **OK/Menu** key (*Figure B*)
On = current time minus 1 hour.
5. Press and hold **OK/Menu** key to return back to **Settings Menu**.

5.8 Language

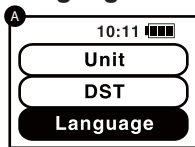

1. From **Time Mode** page, press and hold **OK/Menu** key to access **Main Menu**.
2. Use **Up** or **Down** key to select **Settings** and press **OK/Menu** key.
3. Use **Up** or **Down** key to select desired **Language** and press **OK/Menu** key (*Figure A*).
4. Press and hold **OK/Menu** key to return back to **Settings Menu**.

5.9 Device Info

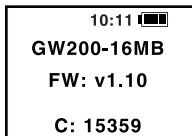

1. From **Time Mode** page, press and hold **OK/Menu** key to access **Main Menu**.
2. Use **Up** or **Down** key to select **Settings** and press **OK/Menu** key.
3. Use **Up** or **Down** key to select **Device Info** and press **OK/Menu** key.

CAUTION

Global Position System (GPS) was developed and is managed by United States Department of Defense (DOD) that is responsible for its normal operation and position precision control; the U.S. is entitled to affect function or position precision of the whole system without prior notification or announcement based on its political considerations or safety of national defense.

In order to use SWAMI Watch correctly and safely, you must be aware of some specific knowledge; please read the following attentions in the manual prior to operating the device:

- SWAMI Watch was only designed for the purpose of leisure and recreation and it isn't applicable for industrial or special measurement.
- SWAMI Watch is only an auxiliary device, so we will not take any legal liability of accidents due to mistaken operation or wrong judgment by using SWAMI Watch for measurement.

Using Conditions

As Swami Watch uses GPS, the GPS features are available only in the places that can receive satellite signals, excluding places indoor or in water.

Charging Swami Watch

1. Place Swami Watch inside clamp on Swami Watch Charger (*Image A*). Insert USB end into computer or AC Charger.
2. Make sure that the charging ports on the back of the watch (*Image B*) are matched up with the prongs on the bottom of the charging clamp (*Image C*).
3. Charger will clamp securely over Swami Watch when connected correctly (*Image D*).
4. Charging Icon will appear in top right corner of screen to indicate a charge (*Image E*).

Charging Station



Image A



Image B



Image C



Image D



Image E



Warranty / Return Policy

SWAMI is warranted to be free from defects for up to 90 days from your purchase date. Software updates are free of charge. Izzo cannot refund your purchase. Izzo will replace any defective unit within the warranty period. Please call Swami Support at 800-777-7899 to request a Return Authorization. All defective product must be returned to:

Izzo Golf
1635 Commons Parkway
Macedon, NY 14502

Please include a note with your Name, Address, Phone # and the Return Authorization #. Your replacement SWAMI will be shipped once we receive and diagnose the returned unit.

QUESTIONS & ANSWERS

For U.S. customers, if you have any other questions or concerns, please call 1-800-777-7899 or go to www.IZZO.com.

For U.K. customers, if you have any other questions or concerns, please call 01342 836376 or email richard@skymaxsport.co.uk.

For EU customers, if you have any other questions or concerns, please call +44 (0)844 8717775 or email customerservice@secondchance.co.uk.



REGISTER YOUR SWAMI WATCH

FILL OUT THE INFORMATION BELOW OR GO TO
WWW.IZZO.COM/SWAMIREGISTRATION

NAME: _____

ADDRESS: _____

EMAIL: _____

PHONE: () _____

DATE PURCHASED: _____ / _____ / _____





**MAIL TO: IZZO GOLF
1635 COMMONS PKWY
MACEDON, NY 14502-9191**

[PLEASE PLACE INSIDE ENVELOPE]

