

POWER ON / OFF

POWER ON



Long Click (2sec)


POWER OFF



Long Click (3sec)

PLAY GOLF

Press the "Play" button on the main menu to search for nearby courses. After selecting a course, the yardage screen will automatically appear when you enter the tee box. After searching for a course, you can press "Start Round" or select a course using "Manual Select."

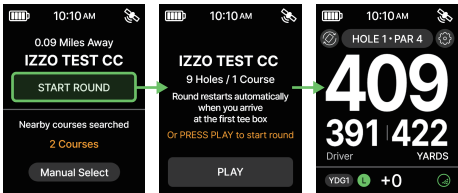


Nearby Courses

Near Tee Box

Entering the Tee Box

MANUAL COURSE SELECTION

The MAX Touch recommends automatic selection; however, you can also select a course manually. If you choose manual selection, you must confirm the selected course.

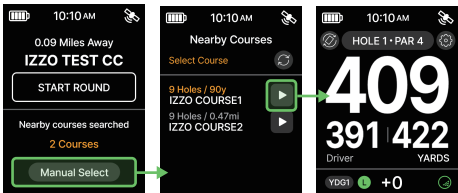


Nearby Courses

Manual Select


Yardage Display

SCREEN DISPLAY / MODE

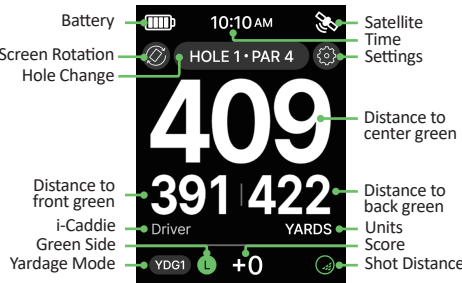

VIEW MODES

YDG1 View: Shows large center, front, and back distances.
YDG2 View: Tap the YDG icon in the lower-left corner of the screen to show the enlarged center distance only.
YDG2 F/B View: From the YDG2 view, tap the button or the center of the screen to access front and back green distances.

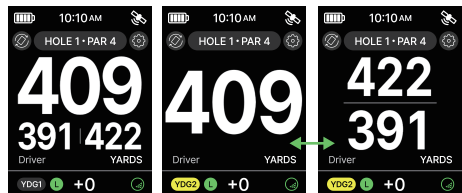



YDG1

YDG2 Center

YDG2 F/B

ACCESSING FEATURE SCREEN

During a round, you can move to the score, distance, or hole change screen by touching the area below the main display.

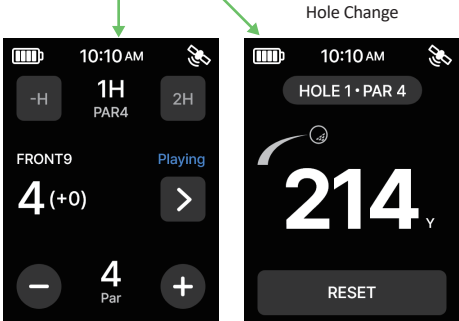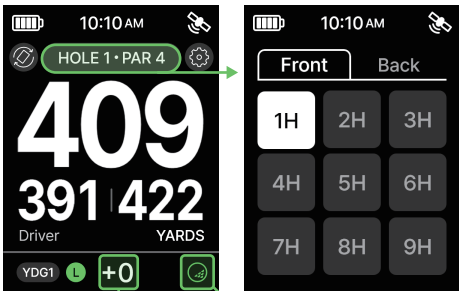


Score Card

Shot Distance

SETTINGS




Pressing the device button displays the shot distance screen (automatically returns to the main screen).

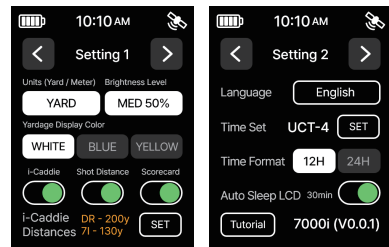

- **Units (Yards/Meters):** Choose distance unit.
- **Screen Brightness:** Low (30%), Medium (50%), High (75%), Max (100%).
- **Display Colors:** White, blue, yellow options.
- **i-Caddie (Toggle):** Set driver and 7-iron distances; algorithm suggests clubs based on target distance.
- **Shot Distance (Toggle):** Measures shot distance.
- **Scoring (Toggle):** Tracks and saves scorecard.
- **Language:** Select interface language.
- **Time Set:** Set time zone and daylight saving time.
- **Time Format:** 12-hour or 24-hour format.
- **Auto Sleep LCD (Toggle):** Auto sleep after 30 minutes.
- **Tutorial:** View basic tutorial.
- **Model S/N:** Shows model name and serial number.

I-CADDIE CLUB SUGGESTION SET-UP

To set up i-Caddie, you will first need to know your driver and 7-iron distances in your preferred unit of measure (yards/meters). Based on that information, the proprietary firmware will then make club suggestions based on the measured distance.

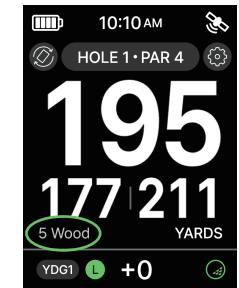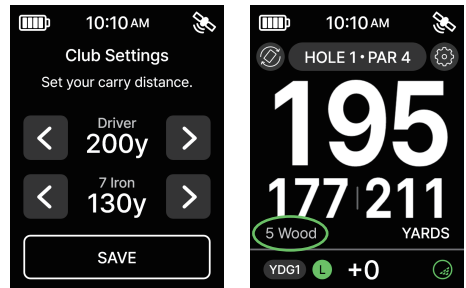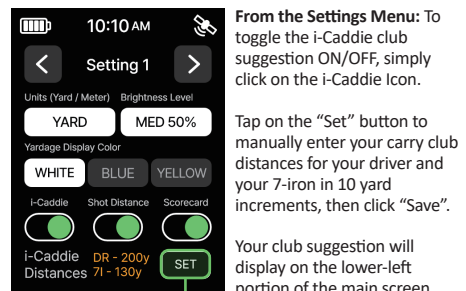


BUTTON DESCRIPTION




SHORT CLICK (SINGLE PRESS)

Short click will return you to the main screen.

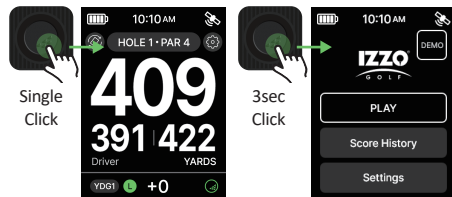

In Yardage Screen View: Cycle through screens by single-clicking the button.

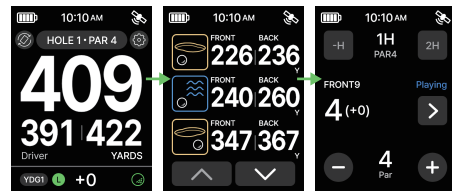

HAZARD/ SCORE / SETTING

During a round, you can move the screen by swiping or scrolling down.

SCREEN SWIPE

From Main Yardage Menu: Swipe left to view Hazards, then swipe left again to view Score. If no touch is detected, the screen automatically returns to the main yardage screen.




SCREEN SCROLL DOWN

During a round, scroll down to access the settings menu. The screen auto-returns to the yardage screen after 10 seconds, or press the button to return immediately.



SCORE


Tap (+/-) to set your score, then use the > arrow to check the full score list.

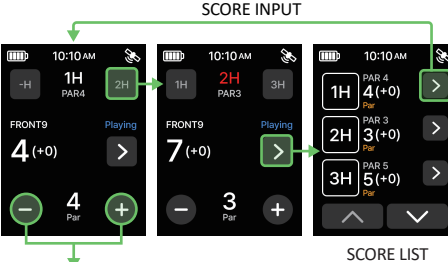

Tap (-) or (+) to adjust your score for this hole.

SHOT DISTANCE

After hitting a shot, press the Shot Distance button and walk to where the ball landed to measure the distance.

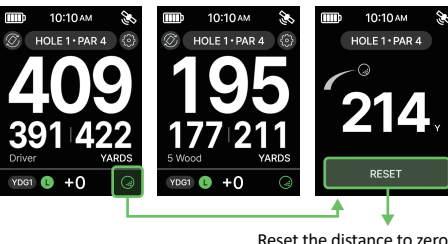


END ROUND / RESET

To end a round, long-press (3 seconds) on the yardage screen. Note: All score information and settings will be reset.



FACTORY RESET

NOTE: all score information and settings will be reset. To perform a factory reset, press and hold the main button for at least 10 seconds. Continue holding past the "Power Off" screen until the factory reset screen appears.

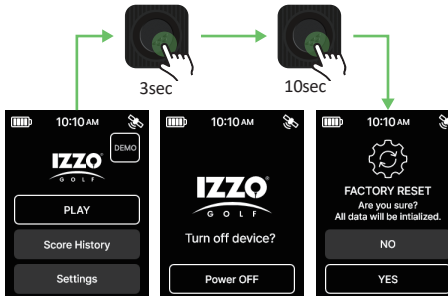

SCREEN ROTATION


The screen view can be manually rotated between portrait and landscape modes by tapping the rotation button.

▲ Landscape mode is only available on the Yardage screen.



UPDATING YOUR SWAMI DEVICE

Whether you use a Mac or a Windows PC, our software is designed to function seamlessly across both systems, providing maximum flexibility and convenience.

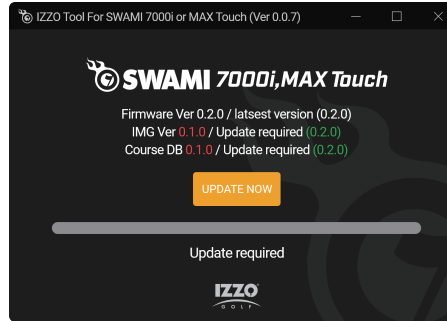

<https://izzo.com/pages/product-support>


- Visit the provided URL and download the software for your operating system.
- Save the "Update Tool" to your desktop.
- Connect your Swami device to the computer using the supplied cable.
- Launch the Update Tool to begin the update process.
- Once the update is complete, disconnect the device.

Your Max Touch is now updated with the latest firmware and course maps.

▲ If the download stops, you must update again.

CHARGING

- **Charging:** Insert the USB-C charging end into the MAX Touch, then connect the USB end of the charging cord to a USB charging port or AC adapter
- **Charging Rate:** Recommended charging rate is 5V, 1A.
- **Charging Time:** A full charge takes roughly 6 hours.

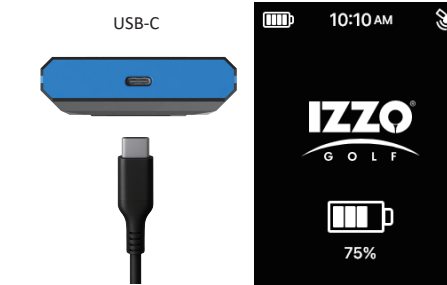

WARRANTY INFORMATION

For all warranty/use questions, do not return this unit to the retailer. Please call customer service at 800-284-1220 or visit www.izzo.com

1-year limited warranty: If for some reason your Izzo product isn't performing to the highest standards, we will be happy to repair or replace it at no charge for a period of 1 year after purchase.

